


EXTECH®

Model TM40

Corkscrew Stem Thermometer

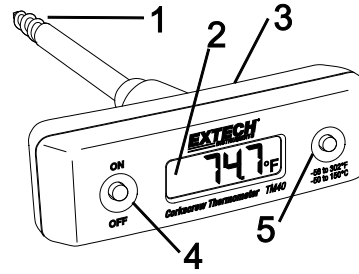

Operation

Button Description

ON/OFF button (1): Press to turn power on or off

Units C/°F button (5): Press to select the temperature units

Measuring Temperature

Remove the protective cover from the temperature device. Insert the temperature probe (1) into the desired object at a depth of at least 10mm (0.40 in.) The temperature of the object will be displayed on the LCD screen (2).

Safety

- The corkscrew sensor is very sharp, please use caution.
- Do not allow children to handle or play with device.
- Do not place this device in an oven or microwave.
- Remove the battery if unit is to be stored for long periods.

Battery Replacement

1. Remove the 4 rubber grommets from bottom of the unit (3).
2. Remove the four screws underneath the rubber grommets.
3. Replace the battery and reset the screws and grommets.



All EU users are legally bound by the Battery Ordinance to return all used batteries to community collection points or wherever batteries / accumulators are sold!

Disposal in household trash or refuse is prohibited!

Disposal: Follow the valid legal stipulations in respect of the disposal of the device at the end of its lifecycle

Other Battery Safety Reminders

- Never dispose of batteries in a fire. Batteries may explode or leak.
- Never mix battery types. Always install new batteries of same type.

Specifications

Range	-50 to 150°C (-58 to 302°F)
Resolution	0.1°
Accuracy	±1°C (±1.8°F)
Stem	101mm / 4" stainless steel
Battery	SR44 (G13) or equivalent
Weight	85g (3 oz.)

Copyright © 2022 FLIR Systems Inc.

All rights reserved including the right of reproduction in whole or in part in any form

ISO-9001 Certified

www.extech.com