

Model HDV-WTX

Wireless Transmitter


For use with the HDV600 Borescope only

The wireless transmitter is intended for use in areas that are difficult to access or in situations when it is hard to maneuver the probe with the display attached. The probe can also be connected directly to the monitor using the patch cord.

Note: The battery must be fully charged for wireless operation. A weak battery may result in meter shut down.


Wireless Mode

1. Connect the AC adaptor to the transmitter and charge the battery.
2. Attach the probe to the transmitter.
3. Press and hold the Power button for 4 seconds to turn the monitor on, then select "WIRELESS" under the INPUT SOURCE selection in the MENU screen.
4. Press and hold the Power button for 4 seconds to turn the transmitter on. The camera video will be transmitted to the monitor display.

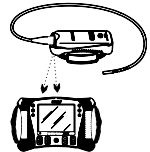

Direct Mode

1. Connect the AC adaptor to the transmitter and charge the battery.
2. Attach the probe to the transmitter.
3. Connect the patch cord between the transmitter and the monitor probe input connector.
4. Press and hold the Power button for 4 seconds to turn the transmitter on.
5. Press and hold the Power button for 4 seconds to turn the monitor on, then select "DIRECT" under the INPUT SOURCE selection in the MENU screen.
6. In the direct mode, light intensity is controlled by the buttons on the monitor, not by the buttons on the transmitter.

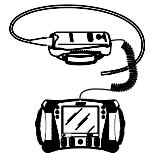

This product is warranted for one year

Copyright © 2022 FLIR Systems Inc.

All rights reserved including the right of reproduction in whole or in part in any form

ISO-9001 Certified

www.extech.com